



Badger Meter

Fluid Management System

Printer Replacement Kit


REPLACEMENT PROCEDURE

1. Unplug the Keypad power cord.




2. Open the printer paper cover and remove the paper roll.
3. Loosen the two black, phillips-head anchor screws located on both sides of the paper cradle.

NOTE: The two anchor screws also hold two L-brackets located beneath the printer. One bracket is larger than the other, so be sure to notice the bracket locations.

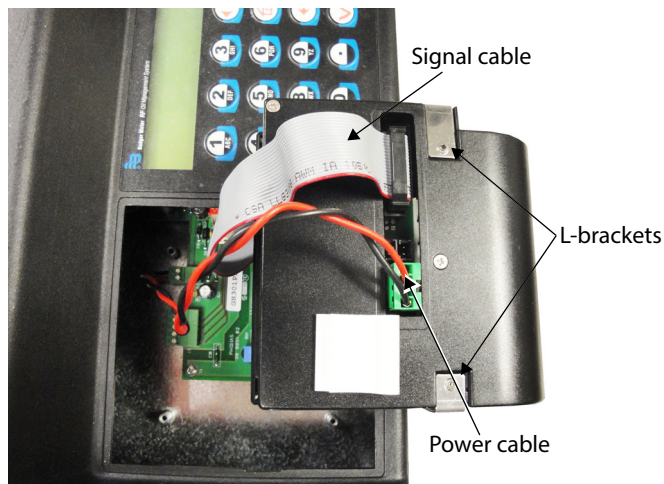

4. Lift the printer out of the Keypad housing making sure to also remove the two L-brackets.
5. Disconnect the red-green power and grey signal cables from the back of the printer.
6. Remove the L-brackets from the printer, if they were not removed in Step 4.

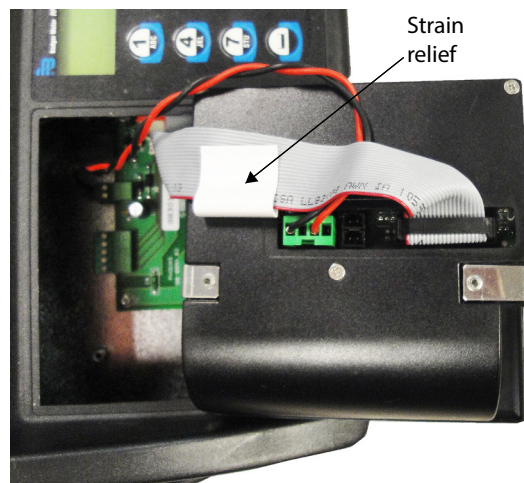

7. Attach the L-brackets to the replacement printer per the bracket sizes and locations in step 6.
8. Attach the cables to the replacement printer, using the white plastic, signal cable strain relief.
9. Place the printer into the Keypad housing (see 1st picture).
10. Tighten the two anchor screws.
11. Replace the paper roll (instructions are printed inside of the paper cover) and then close the cover.
12. Plug in the Keypad power cord and print a test report.

Control. Manage. Optimize.

Trademarks appearing in this document are the property of their respective entities. Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2014 Badger Meter, Inc. All rights reserved.

www.badgermeter.com

The Americas | Badger Meter | 4545 West Brown Deer Rd | PO Box 245036 | Milwaukee, WI 53224-9536 | 800-876-3837 | 414-355-0400
México | Badger Meter de las Americas, S.A. de C.V. | Pedro Luis Ogazón N°32 | Esq. Angelina N°24 | Colonia Guadalupe Inn | CP 01050 | México, DF | México | +52-55-5662-0882
Europe, Middle East and Africa | Badger Meter Europa GmbH | Nürtinger Str 76 | 72639 Neuffen | Germany | +49-7025-9208-0
Europe, Middle East Branch Office | Badger Meter Europe | PO Box 341442 | Dubai Silicon Oasis, Head Quarter Building, Wing C, Office #C209 | Dubai / UAE | +971-4-371 2503
Czech Republic | Badger Meter Czech Republic s.r.o. | Maříkova 2082/26 | 621 00 Brno, Czech Republic | +420-5-41420411
Slovakia | Badger Meter Slovakia s.r.o. | Racianska 109/B | 831 02 Bratislava, Slovakia | +421-2-44 63 83 01
Asia Pacific | Badger Meter | 80 Marine Parade Rd | 21-06 Parkway Parade | Singapore 449269 | +65-63464836
China | Badger Meter | 7-1202 | 99 Hangzhong Road | Minhang District | Shanghai | China 201101 | +86-21-5763 5412

Legacy Document Numbers: IAB-187-01 PN 53400-187