

Total Button	Press when in <i>normal</i> operation to cycle the display between the non-resettable totalizer and the resettable totalizer..
	Press when in the <i>programming</i> mode to select an item to be changed.
Reset Button	Press <i>momentarily</i> when in <i>normal</i> operation to clear the display.
	Press when in the <i>programming</i> mode to change a flashing object on the display.

TO CHANGE THE UNIT OF MEASURE

1. Press **TOTAL** three times then press **RESET** three times in a time frame of under 2 seconds. The active unit of measure symbol will flash when you have entered the programming mode.
2. Toggle the **RESET** button until desired unit of measure flashes on the display.
3. Press and hold **RESET** and **TOTAL** simultaneously for 3 seconds to exit programming mode

The display will flash three times and then go blank to indicate the changes have been saved.

NOTE: Changing any unit of measure will reset the totalizer to zero.

TO PROGRAM THE SCALE FACTOR

1. Press **TOTAL** three times then press **RESET** three times in a time frame of under 2 seconds. The active unit of measure symbol will flash when you have entered the programming mode.
2. Press **TOTAL** to advance to the first digit of the scale factor.
3. The selected digit will blink. Press **RESET** to change the value.
4. Press **TOTAL** to move to the next digit.
5. Continue this process until the correction factor has been entered.
6. Press and hold **RESET** and **TOTAL** simultaneously for 3 seconds to exit the programming mode.

The display will flash three times and then go blank to indicate the changes have been saved.

When replacing registers with part number 64870-XXX, use the same scale factor. When replacing registers with part number 62580, use the conversion charts.

NOTE: Electronic register 62580-XXX is replaced with electronic register 66300-XXX.

MODEL OG CONVERSION CHART	
Old Register to New Register	
PN 62580	PN 66300
3.496	1.008
3.481	1.004
3.460	1.000
3.438	0.994
3.423	0.986
3.649	1.052
3.634	1.048
3.612	1.044
3.589	1.038
3.554	1.029
3.731	1.076
3.715	1.072
3.693	1.067
3.669	1.061
3.634	1.052

MODEL PG-690 CONVERSION CHART	
Old Register to New Register	
PN 62580	PN 66300
1.020	0.2946
1.019	0.2943
1.018	0.2940
1.017	0.2938
1.016	0.2935
1.015	0.2932
1.014	0.2929
1.013	0.2926
1.012	0.2923
1.011	0.2920
1.010	0.2917
1.009	0.2915
1.008	0.2912
1.007	0.2909
1.006	0.2906
1.005	0.2903
1.004	0.2900
1.003	0.2897
1.002	0.2894
1.001	0.2891
1.000	0.2889
0.999	0.2886
0.998	0.2883
0.997	0.2880
0.996	0.2877
0.994	0.2871

Control. Manage. Optimize.

Trademarks appearing in this document are the property of their respective entities. Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2014 Badger Meter, Inc. All rights reserved.

www.badgermeter.com

The Americas | Badger Meter | 4545 West Brown Deer Rd | PO Box 245036 | Milwaukee, WI 53224-9536 | 800-876-3837 | 414-355-0400
México | Badger Meter de las Americas, S.A. de C.V. | Pedro Luis Ogazón N°32 | Esq. Angelina N°24 | Colonia Guadalupe Inn | CP 01050 | México, DF | México | +52-55-5662-0882
Europe, Middle East and Africa | Badger Meter Europa GmbH | Nurtinger Str 76 | 72639 Neuffen | Germany | +49-7025-9208-0
Europe, Middle East Branch Office | Badger Meter Europe | PO Box 341442 | Dubai Silicon Oasis, Head Quarter Building, Wing C, Office #C209 | Dubai / UAE | +971-4-371 2503
Czech Republic | Badger Meter Czech Republic s.r.o. | Mařikova 2082/26 | 621 00 Brno, Czech Republic | +420-5-41420411
Slovakia | Badger Meter Slovakia s.r.o. | Racianska 109/B | 831 02 Bratislava, Slovakia | +421-2-44 63 83 01
Asia Pacific | Badger Meter | 80 Marine Parade Rd | 21-06 Parkway Parade | Singapore 449269 | +65-63464836
China | Badger Meter | 7-1202 | 99 Hangzhong Road | Minhang District | Shanghai | China 201101 | +86-21-5763 5412