

Printer Installation Kit

for Dispense Keypad

REPLACEMENT PROCEDURE

1. Unplug the Keypad power cord.




- 2. Open the printer paper cover and remove the paper roll.
- 3. Loosen the two black phillips-head anchor screws located on both sides of the paper cradle.

NOTE: The two anchor screws also hold two L-brackets located beneath the printer. One bracket is larger than the other, so be sure to note bracket locations.

4. Lift the printer out of the Keypad housing making sure to also remove the two L-brackets.



5. Disconnect the red-green power and grey signal cables from the back of the printer.

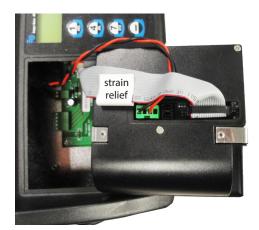

- 6. Remove the L-brackets from the printer.
- 7. Attach the L-brackets to the replacement printer per the bracket sizes and locations in step 6.
- 8. Attach the cables to the replacement printer, using the white plastic, signal cable strain relief.
- 9. Place the printer into the Keypad housing (see 1st picture).
- 10. Tighten the two anchor screws.
- 11. Replace the paper roll (instructions are printed inside of the paper cover) and then close the cover.
- 12. Plug in the Keypad power cord and print a test report.



Control. Manage. Optimize.

Trademarks appearing in this document are the property of their respective entities. Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2018 Badger Meter, Inc. All rights reserved.

www.badgermeter.com