

Hydraulic Vibrators

Replacing Cannon Connectors

1. Trim the black conduit cover to expose the stainless steel coil.



2. Remove the stainless steel coil.
3. Trim the red conduit to expose the wires.



4. Cut the steel casing.
5. Trim the red conduit to expose the black and white wires.



6. Feed the gray bushing over the conduit.
7. Feed the wires through the end cap, making sure the swivel slot is towards the end.



8. Feed the wires through the isolator. The holes on the isolator are labeled. Feed the white wire through hole A and the black wire through hole B.
9. Insert the pin connector.
10. Solder the white wire to terminal A and black wire to terminal B.



Trademarks appearing in this document are the property of their respective entities.

Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2018 Badger Meter, Inc. All rights reserved.

wycosales@badgermeter.com | www.wycotool.com

Phone: 262-639-6770 | 800-233-9926 | Fax: 262-639-2023